


City Sconce Installation Guide





⚠ WARNINGS

The installation of this lighting bollard fixture and all operations performed during installation must be carried out in accordance with national safety regulations. Installation and commissioning of the product must only be performed by a professional electrician. The manufacturer cannot be held responsible for any damage or problems that may occur due to incorrect installation or improper use. In case of any modifications to the product, the responsibility arising from these changes shall belong to the person/institution making the modification.


The anchorage set and rods are not included in the product package; they must be provided separately.

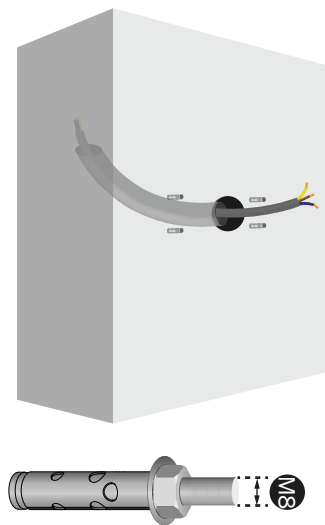

- 1** 1 steel flange required during assembly is available as mounted on the product. Steel dowel (4xM8) must be provided by the assembly team.
 - At least 20 cm main electrical cable should set free from the concrete surface level to have safe and more convenient electrical wire connection.
 - Use spirit level and take into consideration while setting the flange on the concrete surface.

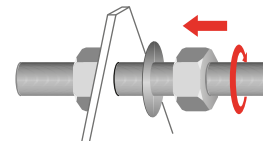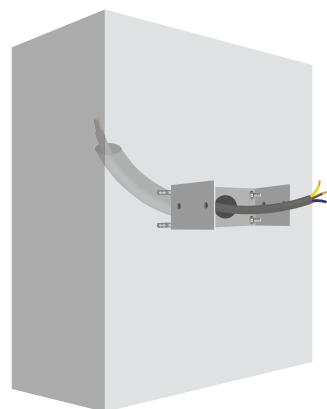

- 2** After flange set on the surface, mark the steel dowel holes. Drill the steel dowel holes with a suitable drill. Then place the steel dowels without nuts on the flange surface. Use the nuts to fix flange into the concrete ground. Next step will be the connection of cables.

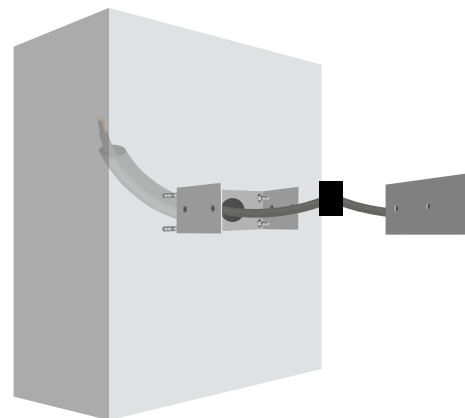

- 3** Please use the electrical connection table to connect cables. Be sure that earthing connection has done.
 - Please control and be sure that the isolation completed according to outdoor conditions.

Electrical Connection

On-Off										
220-240V AC 50-60Hz	<table><tr><td>N</td><td>Ⓜ</td><td>BLUE</td></tr><tr><td>Ⓜ</td><td>Ⓜ</td><td>GREEN YELLOW</td></tr><tr><td>L</td><td>Ⓜ</td><td>BROWN</td></tr></table>	N	Ⓜ	BLUE	Ⓜ	Ⓜ	GREEN YELLOW	L	Ⓜ	BROWN
N	Ⓜ	BLUE								
Ⓜ	Ⓜ	GREEN YELLOW								
L	Ⓜ	BROWN								

On-Off
Brown : F
Blue : N
Yellow-Green : Ground
Black : DALI (+)
Gray : DALI (-)

- 4** After cable connection, mount the product to the flange with 4 nos screws.

